





Remove the inside spare tire panel, Then pop the plastic square inserts out of the panel hanger.



You will line up the new bolt hangers directly in the middle of the square holes and attach by using the supplied self tapping screws. Refer to pic #3

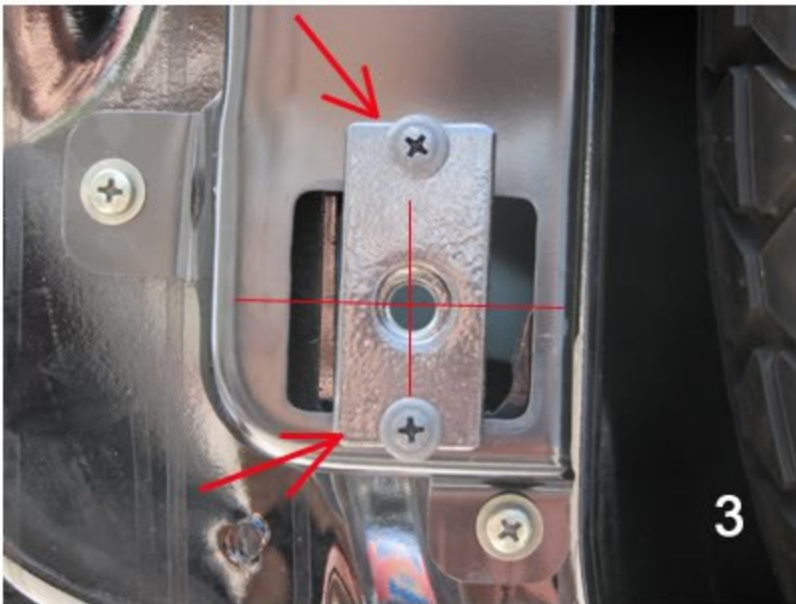

The center of the bolt is offset to one end. The shortest side should be facing down, use a power drill and self tapping screws to mount the hanger making sure the bolt is directly in the middle of the square hole.
Do this to all four Mounts

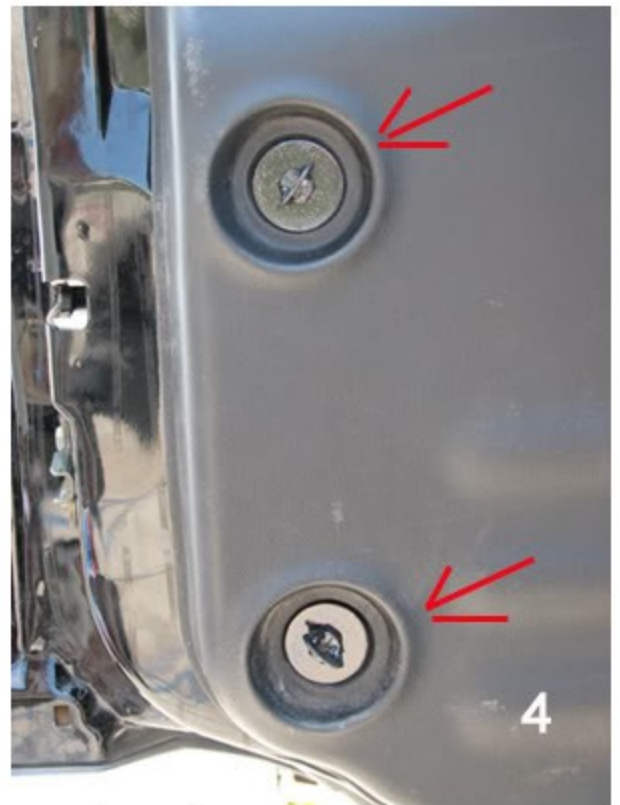

Replace your tire panel and twist in your new Hatchet Bolt Knobs.....Your All done